



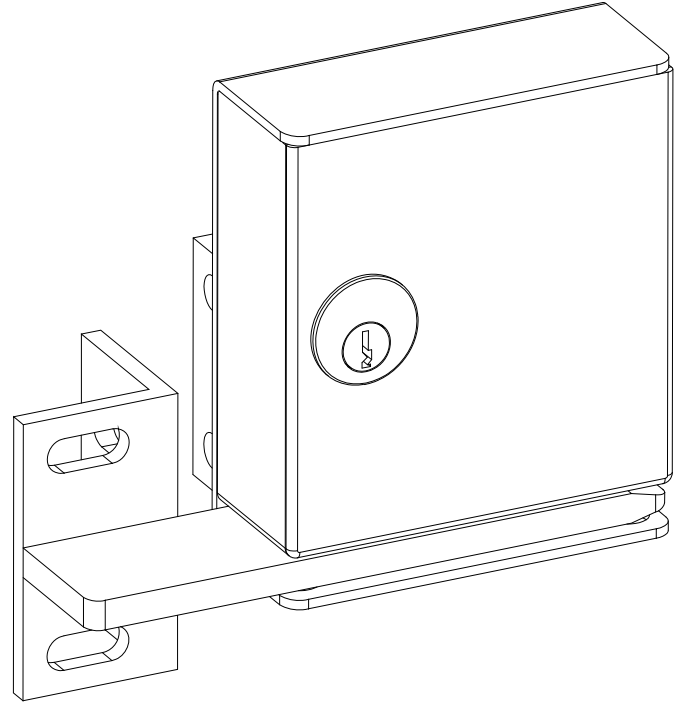

INSTALLATION INSTRUCTIONS

GL160 / GL260 GATELOCK

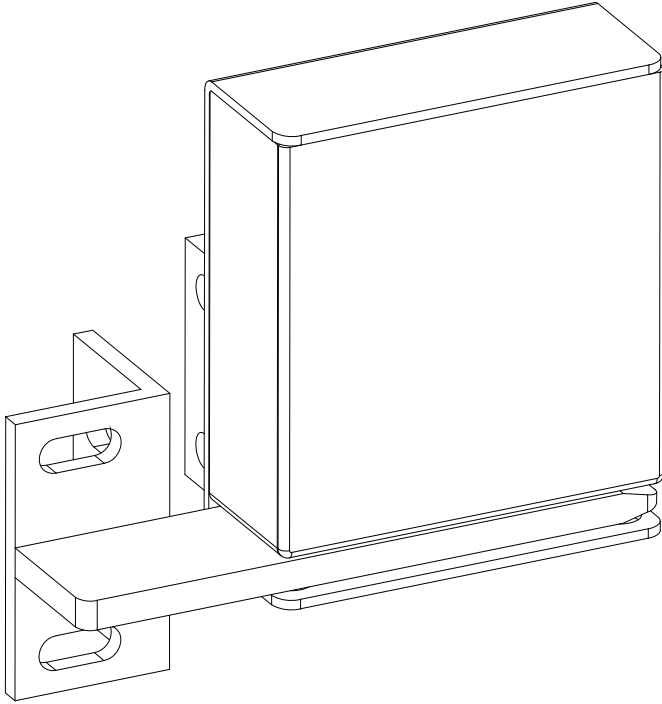

Available Models:

- GL 160AI Fail-Safe
- GL 260AH Fail-Secure
- GL 163AI Fail-Safe, Built in Key Switch
- GL 263AH Fail-Secure, Built in Key Switch
- GL 260MRA Fail-Secure, Mechanical Release

Lock Operation:

The Lock has an adjustable automatic reload switch (ARS standard) that keeps the bolt retracted until the gate is in a closed position. A Bolt Position Switch (BPS, optional) monitors the lock and unlock position of the bolt. A gate position switch (DPS, optional) is also available to monitor whether a gate is opened or closed.

Specifications:

- Dimensions: W 5" x H 6-1/8" x D 2"
- Material: Steel
- Finish: Black
- Solenoid: Continuous Duty
- Bolt Throw: 5/8"
- Bolt Dia: 5/8"
- Dual Voltage: 900mA @ 12 VDC
450mA @ 24 VDC
- ARS: 3A @ 30 VDC
- BPS: 3A @ 250 VAC
- DPS: 3A @ 30 VDC
- Key Switch: 10A @ 28 VDC



CAUTION: DO NOT INSTALL LOCKING TONGUE ONTO LOCK UNTIL WIRING IS COMPLETE.

GL160AI & GL260AH - Gate Lock Mounting

Use the lock housing as a template to mark the mounting holes onto the post. If the wiring will go through the post remove cover and mark the wiring hole before mounting. Use a 3/8" drill size to drill out all holes. Be sure to shim between the mounting brackets as required if the gate post is less than 3". See illustration 1 & 2.

Determine the hand of gate and install the switches accordingly. See Illustration 3. The Illustration below gives an example of a LH swing and or a RH sliding gate install. To reverse the handing swap the position of the ARS and centering assembly to the opposite side of lock.

Before mounting the locking tongue verify that it is properly aligned within the gate lock opening. The locking tongue should be centered with the bolt and make contact with centering assembly and ARS. Once verified mark the mounting holes and drill use 3/8" drill size for all holes. See illustration 4.

Refer to page 4 of instructions for wiring information.

Test operation to verify that its functioning properly and re-install cover..

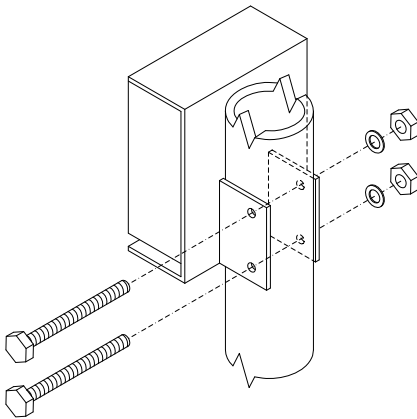


Illustration 1


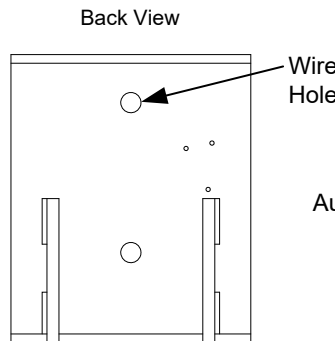


Illustration 2

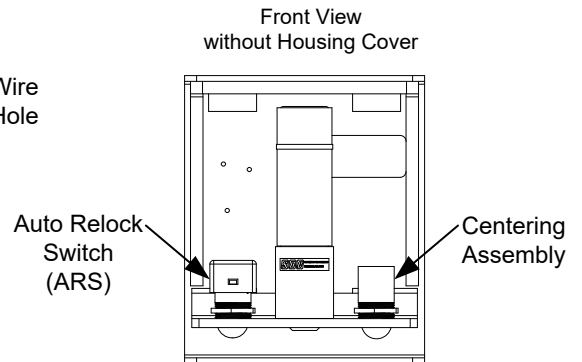

LH Swing Gate or RH Sliding Gate (shown)

Illustration 3


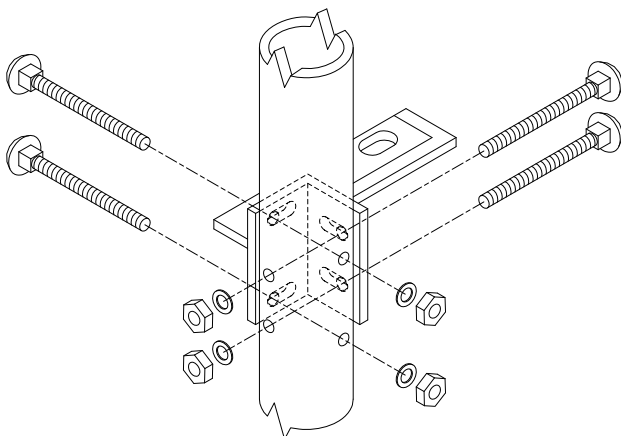


Illustration 4

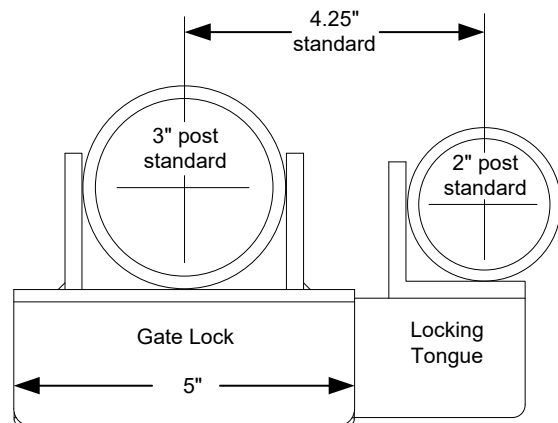

LH Swing Gate or RH Sliding Gate (shown)

GL163AI & GL263AH - Built in Key Switch

Install key cylinder per notes below

- a) Cylinder must be 1-1/8" mortise type with standard tailpiece. See illustrations 5
- b) Remove key and invert the tailpiece. See illustration 6.

Refer to page 4 of instructions for wiring information.

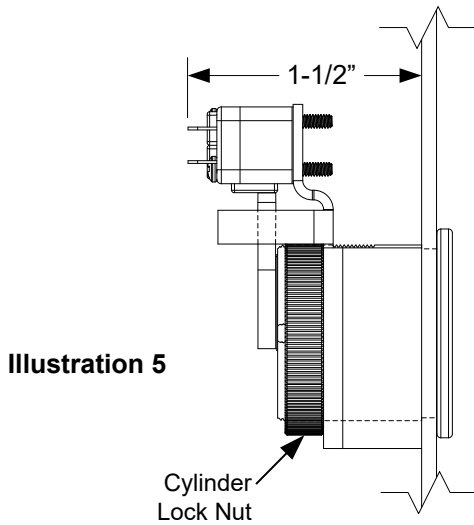


Illustration 5

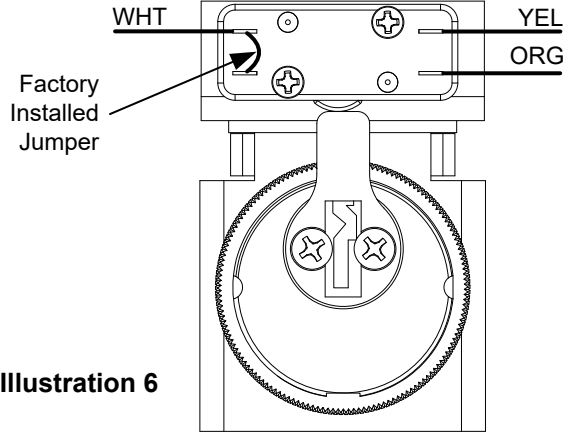


Illustration 6

Note position of mortise cylinder & tailpiece relative to switch. Tailpiece must point up & depress switch button at all times with key removed.

GL260MRA - Mechanical Release

Install key cylinder per notes below

- a) Cylinder must be 1-1/8" mortise type with standard tailpiece. See illustrations 7
- b) Tailpiece must contact retraction arm as shown in View A-A; See illustration 8.

Refer to page 4 of instructions for wiring.

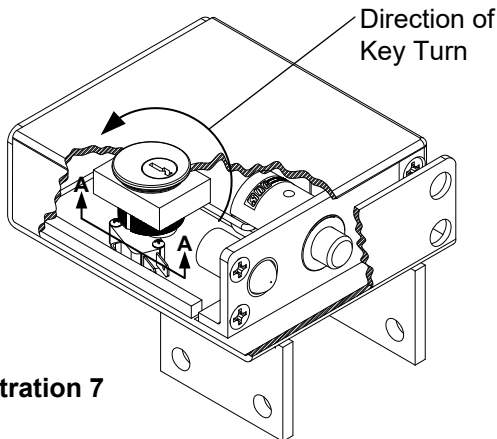


Illustration 7


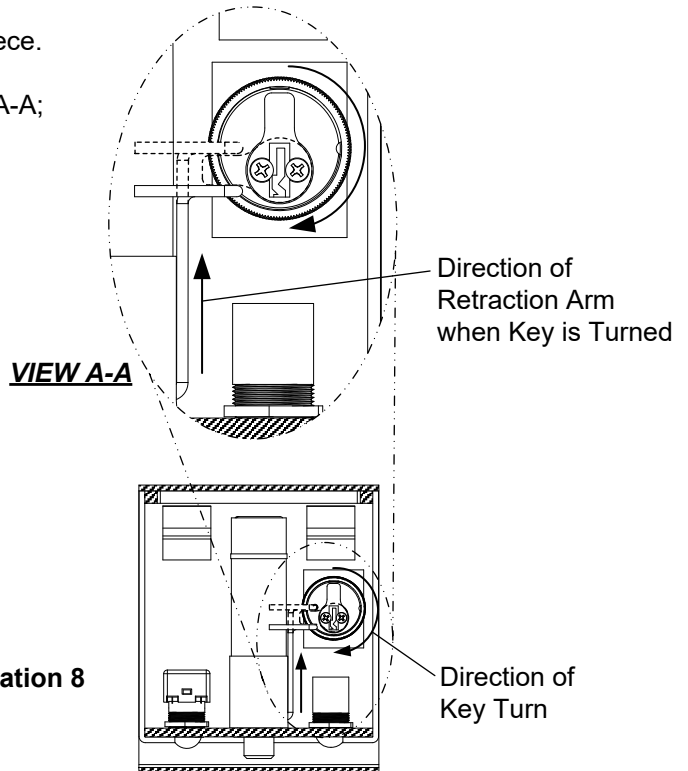


Illustration 8


WIRING REFERENCE

GL160AI Typical Wiring

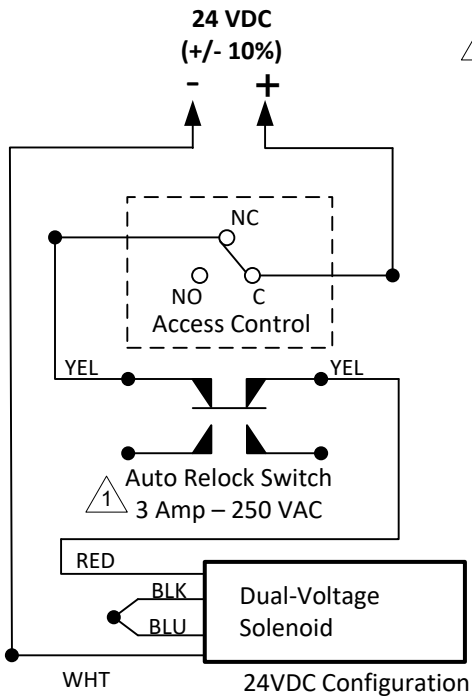


1 Auto Relock Switch wiring shown with tongue engaged inside lock.

GL260AH/260MRA Typical Wiring

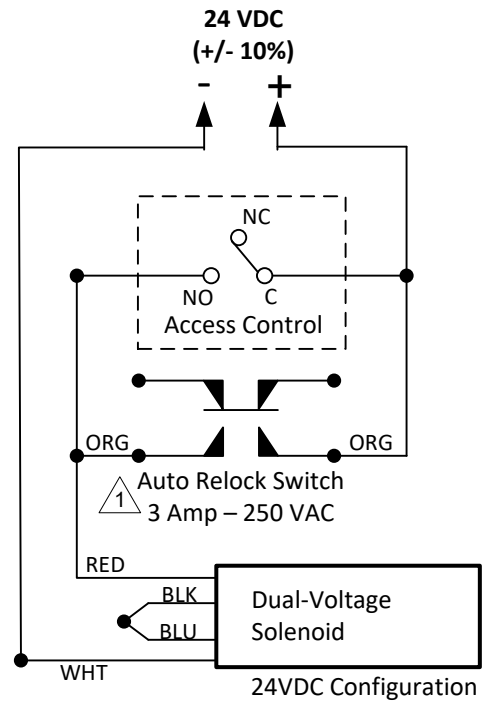


GL163AI Typical Wiring

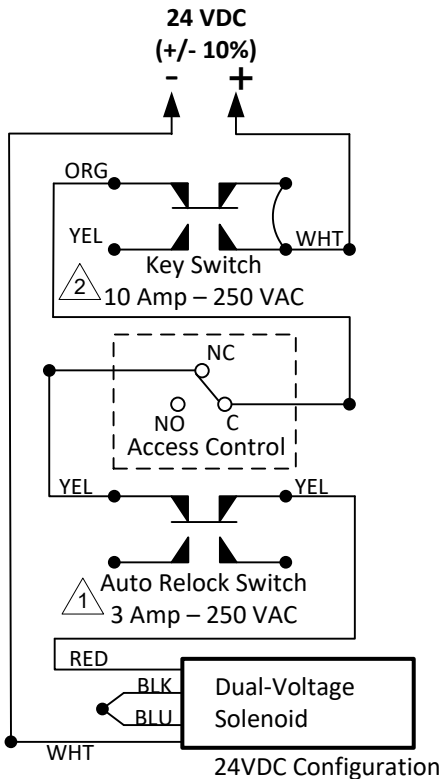

1 Auto Relock Switch wiring shown with tongue engaged inside lock.


2 Key Switch wiring shown with tailpiece depressing switch.

GL263AH Typical Wiring

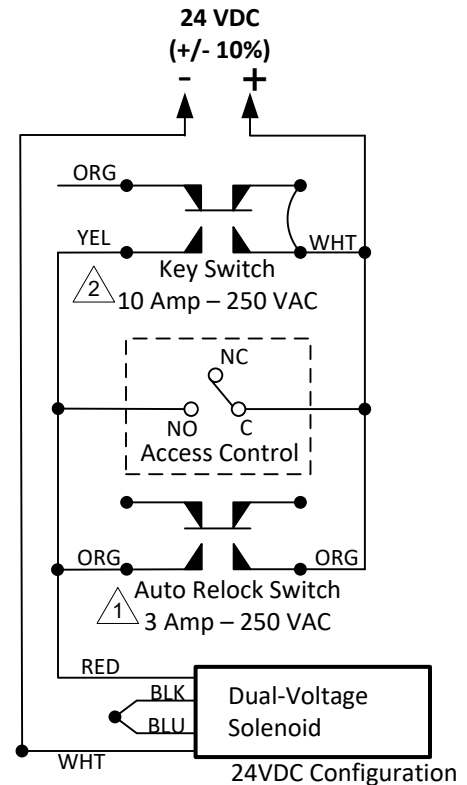


OPTIONAL MONITORING WIRING REFERENCE

GL160AI & GL163AI BPS & DPS Switch Positions

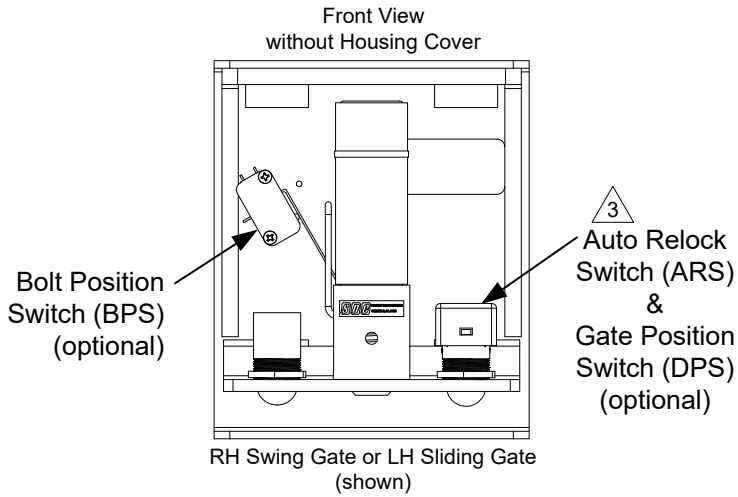


GL160AI & GL163AI BPS Wiring

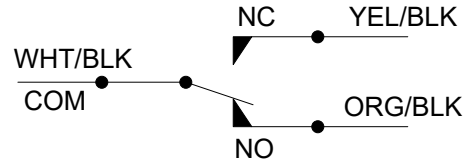


Shown when Bolt is retracted

GL260AH & GL263AH BPS & DPS Switch Positions

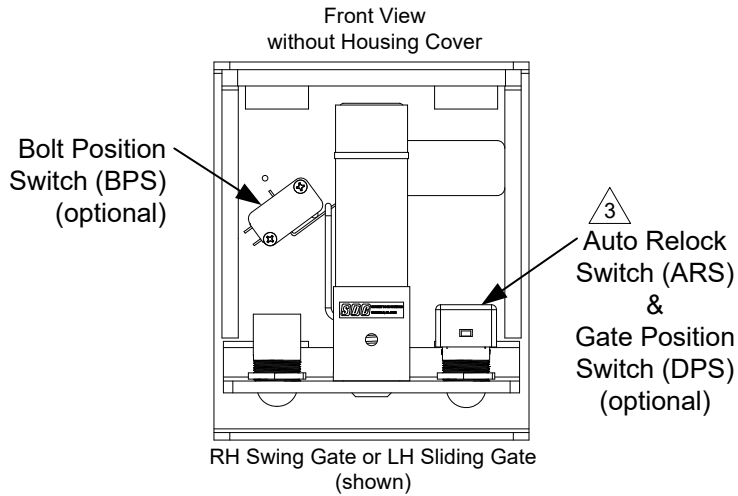


GL260AH, GL263AH, & GL260MRA BPS Wiring

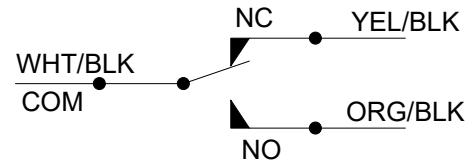

Shown when Bolt is retracted

GL260MRA BPS & DPS Switch Positions

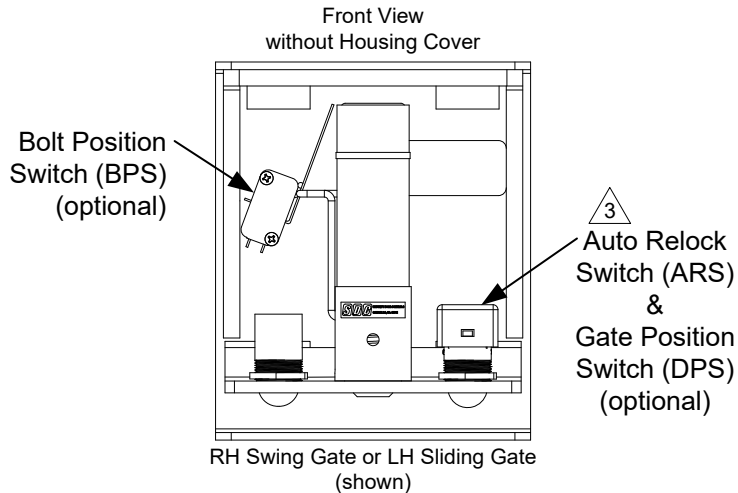

DPS Wiring

WHT	=	COM
YEL	=	N/C
ORG	=	N/O

Shown when tongue is inserted



Auto Relock Switch & Gate Position Switch may change position due to hand of gate. See page 2 & illustration 3.