



INSTALLATION INSTRUCTIONS

FB-4 FUSED OUTPUT TERMINAL BOARDS

The FB-4 provides four (4) individually fused outputs for modular system protection. A 2 amp fuse is supplied for each of the 4 fused outputs. Determine the load requirement for each output and verify that the load will not exceed the fuse rating. The output voltage supplied to each output is the same as the voltage input. The total current required for all of the outputs must not exceed the power supply output current rating.

Each output is individually energized/de-energized by using one of four slide switches. Moving any switch to the "ON" position will turn on its corresponding output. Additionally, the Status LED for that output will be illuminated when the output is ON.

