

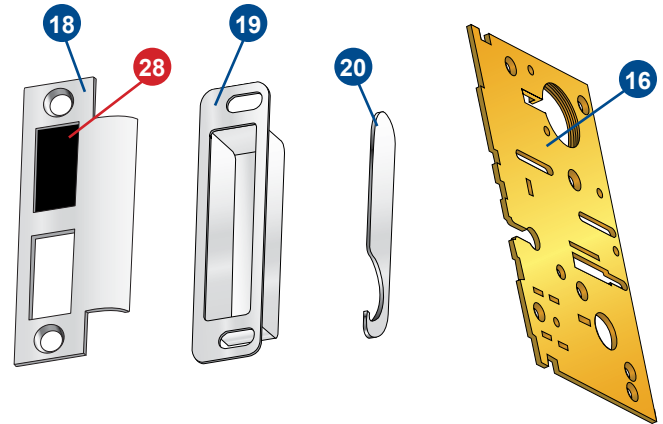
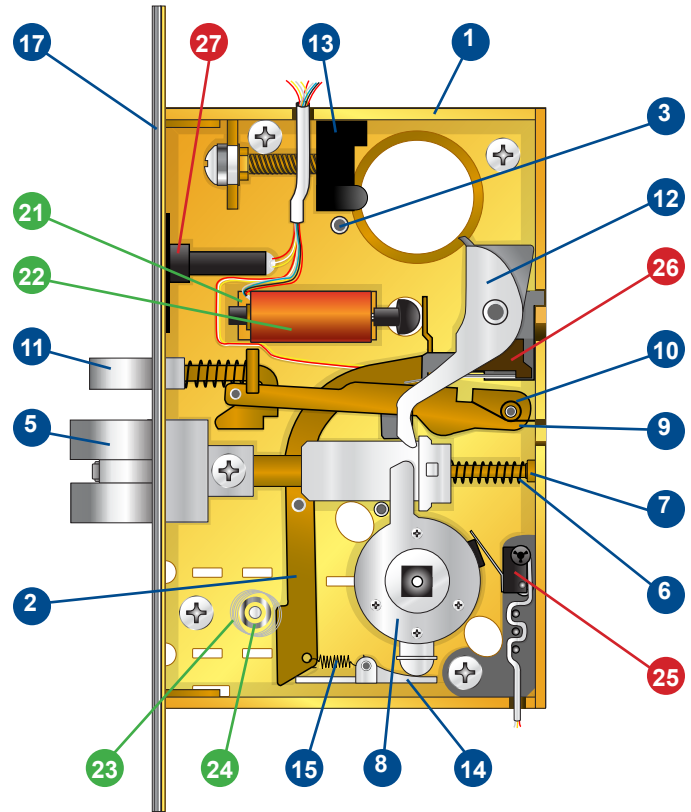


NO.	PART NO.	STANDARD PARTS DESCRIPTION
1	1	13- I C Case Assembly
2	1	SD-03 Retract Lever
3	1	M-38 Cylinder Cam Stopper
5	1	13-2D Latchbolt Assembly
6	1	M-19 Pull Rod Spring
7	1	M-20 Pin For Pull Rod
8	2	13-8 Latch Actuators
9	1	13-6 Guard Lever Assembly
10	1	M-15 Spring For Guard Cover
11	1	13-3 Guard Bolt Assembly
12	1	SD-01 Cylinder Latch Lever
13	1	13-5 Cylinder Retainer
14	1	SD-0-2 Sliding Piece
15	1	SD-06 Cycle Spring
16	1	M-35 Case Cover
17	1	13-9 Face Plate
18	1	M-31 Strike Plate
19	1	M-33 Dust Box
20	1	M-40 Spanner Wrench
21	1	7800-025 Solenoid Cradle
22	1	7800-sol-4 Solenoid
23	1	7800-09 Solenoid Spring
24	1	90295A122 Solenoid washer
OPTIONS		
25	1	R Request-To-Exit Switch
26	1	S Latch & Locked Status Switch
27	1	D Door Status Switch
28	1	D Door Status Magnet

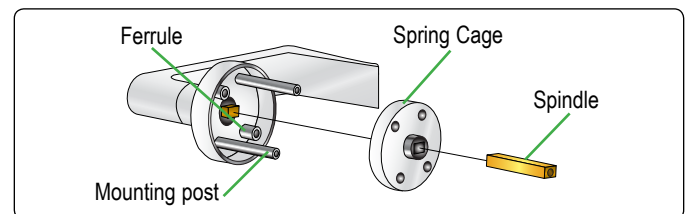


### Lockset Glossary

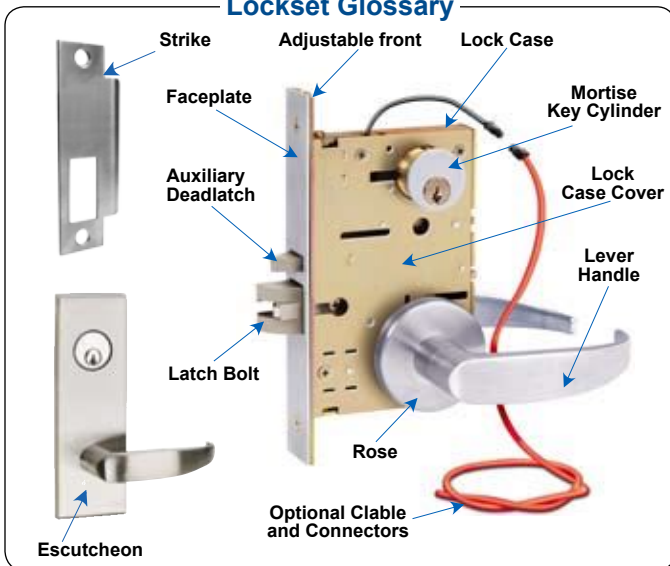


## FAIL SAFE / FAIL SECURE CONVERSION

### Procedure To Change SDC Fail Safe Solenoid To Fail Secure

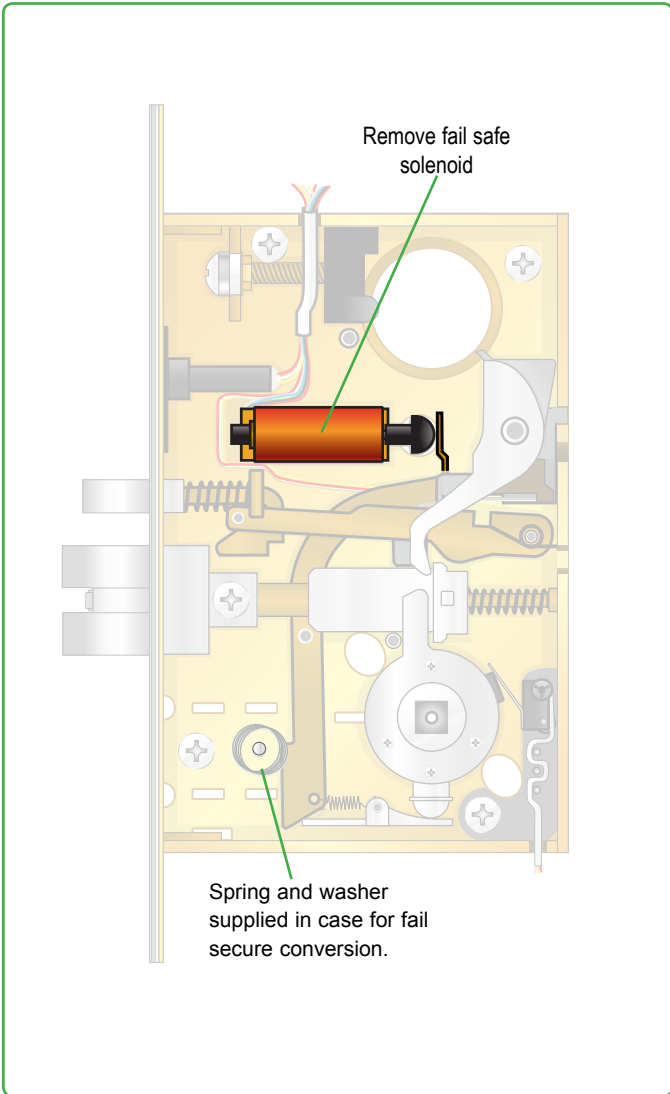




### Fail Safe Assembly

Disassemble fail safe solenoid by unscrewing rod tip assembly from plunger.

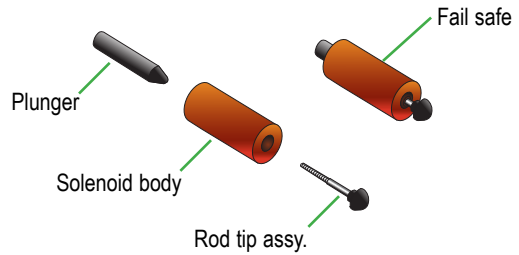

### Fail Secure Assembly

Insert washer and spring onto rod tip assembly and screw into plunger until it bottoms out. Insert plunger/rod tip into solenoid.

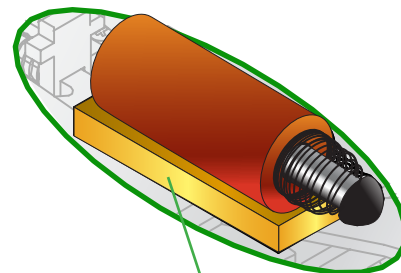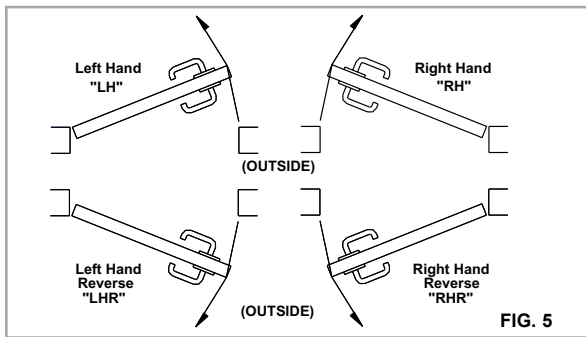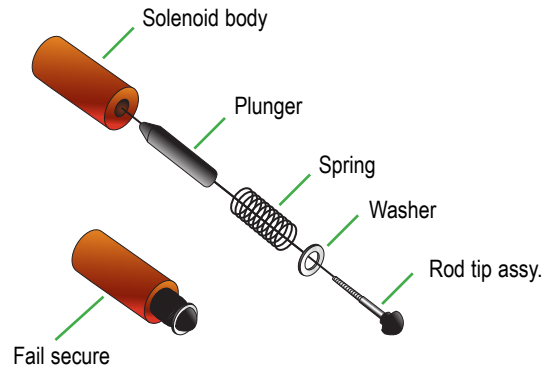

Replace solenoid in cradle as shown.