



SECURITY DOOR CONTROLS ■ WWW.SDCSECURITY.COM
 801 Avenida Acaso, Camarillo, CA 93012
 [t] 800.413.8783 ■ 805.494.0622 ■ E-mail: service@sdsecurity.com

TEMPLATE-S6208_14

Devices covered by this template:
Panic / Fire SVR Exit Device with 08 Classroom & 14 Passage Trim

THIS SIDE UP FOR LHR DOOR

FOLD HERE
CAUTION
 DO NOT USE DOOR EDGE


PLACE THIS SIDE ON FRAME STOP

PLACE THIS SIDE ON DOOR

(4x) DEVICE MOUNTING HOLES
 TRIM: DRILL 5/16" CLEARANCE HOLES ON PUSH SIDE, 15/32" HOLES ON PULL SIDE.

5/8" CLEARANCE HOLE FOR RIM CYLINDER OR TRIM. NOT REQUIRED FOR EXIT ONLY. FOR TRIM INSTALL REFER TO THE CORRELATING INSTRUCTIONS / TEMPLATE.

(2x) END CAP BRACKET HOLES
 METAL: DRILL / TAP FOR 1/4"-20 MACHINE SCREWS.
 WOOD: PRE-DRILL 1/8" HOLES.
 SEXBOLTS: DRILL 5/16" CLEARANCE HOLES ON PUSH SIDE, 3/8" ON PULL SIDE.

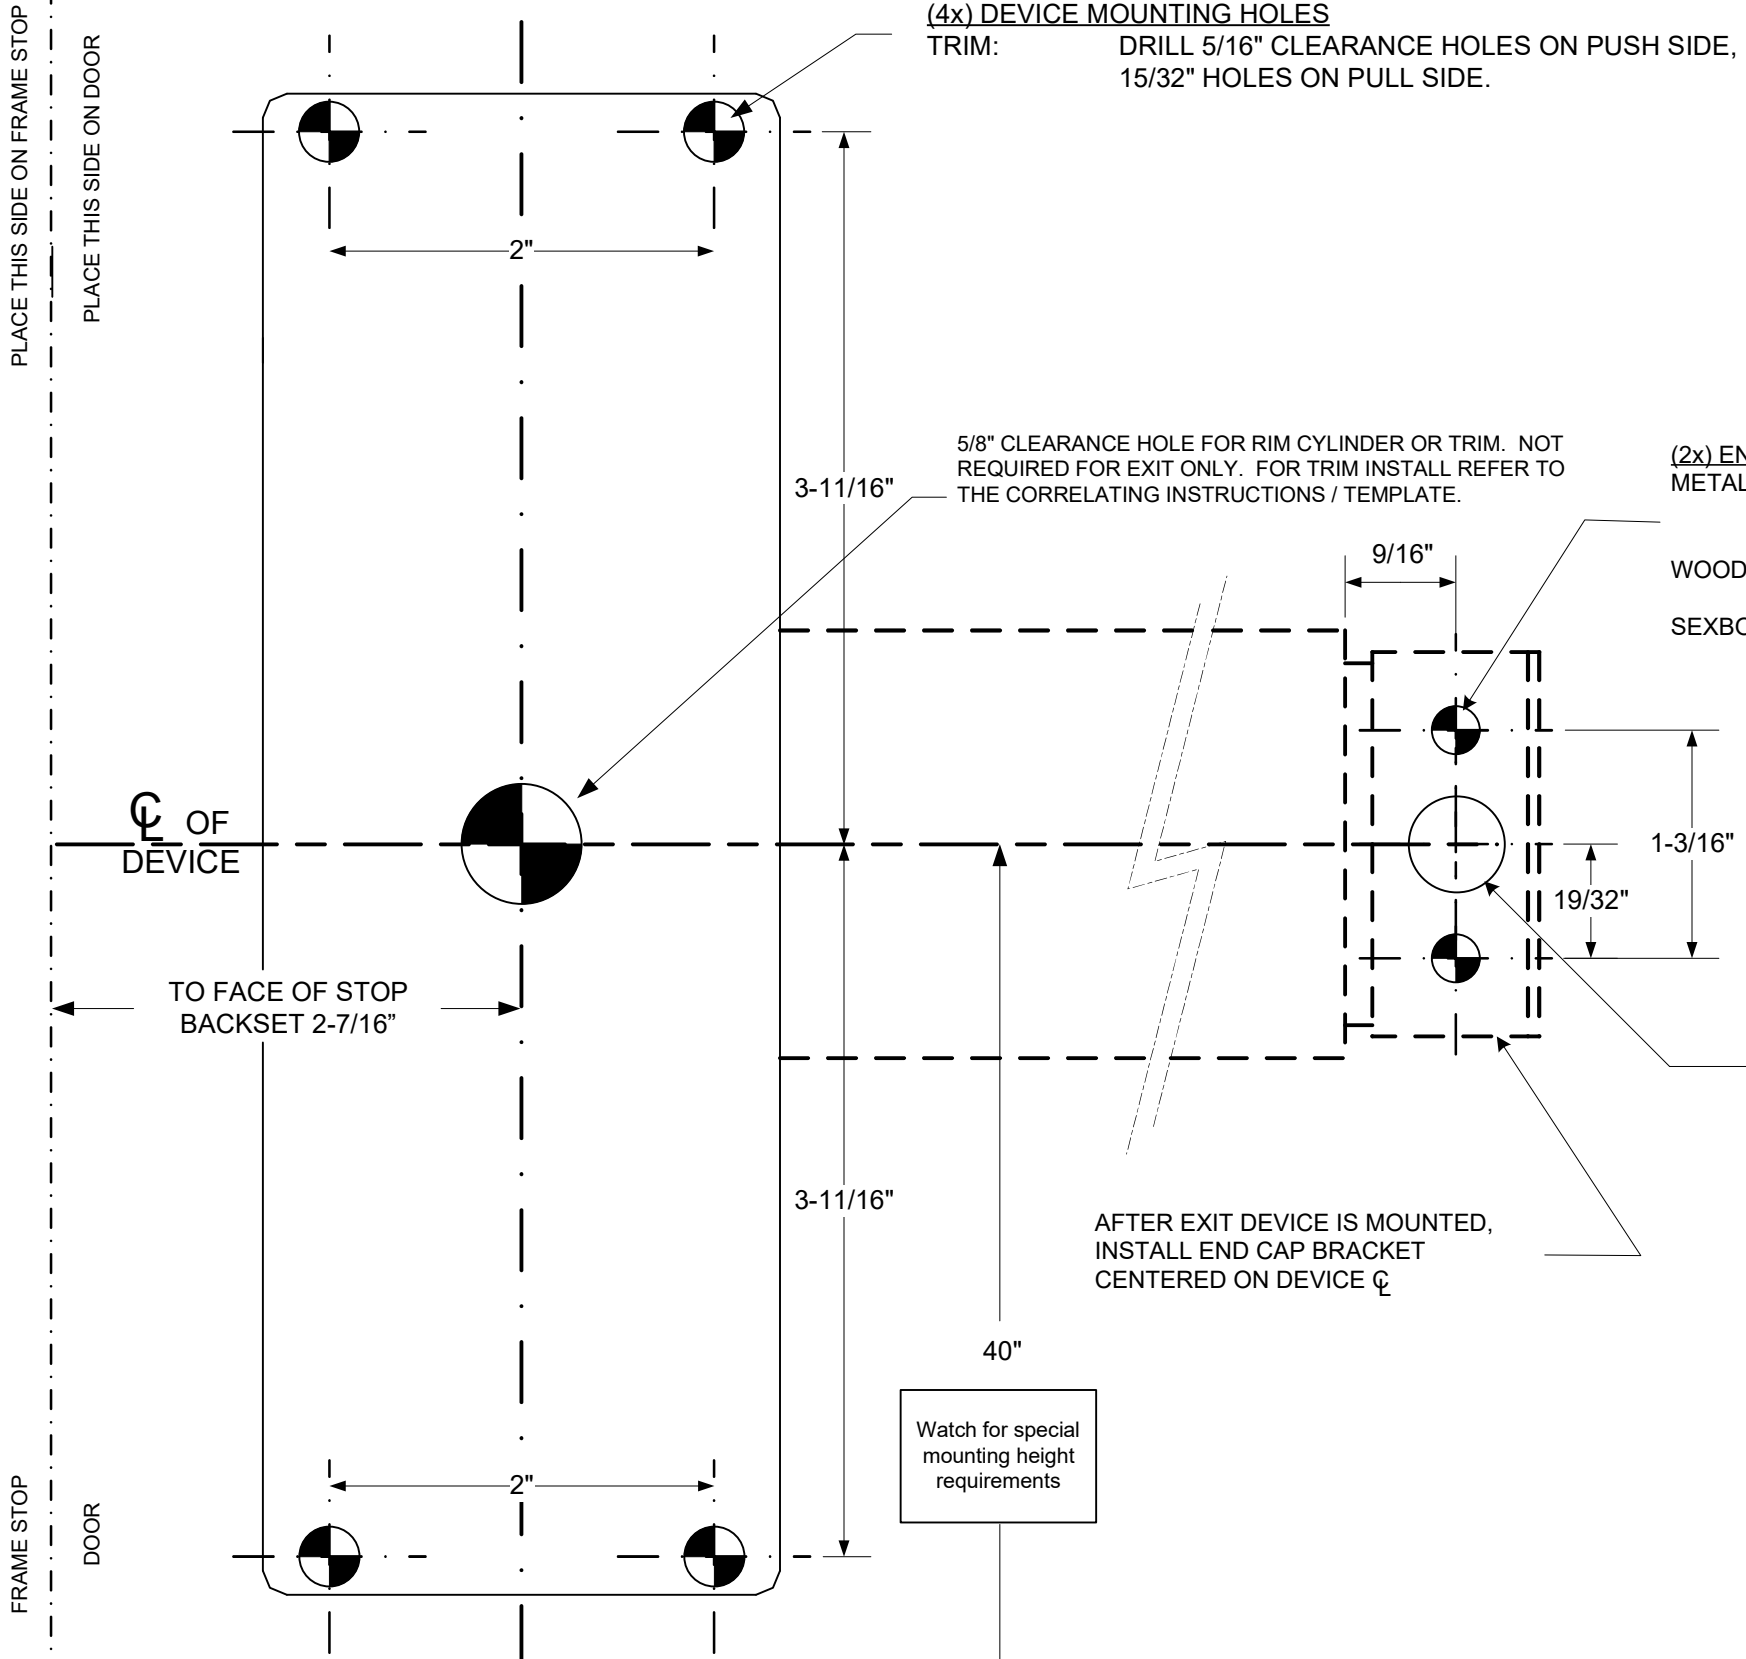

FRAME STOP

DOOR

Watch for special mounting height requirements

FINISHED FLOOR

THIS SIDE UP FOR RHR DOOR

FOLD HERE



**TOP LATCH
TEMPLATE**

(3x) Top Strike Holes

METAL: DRILL / TAP FOR 1/4-20
MACHINE SCREWS

WOOD: 1/8" PILOT DRILL

PLACE THIS SIDE ON
TOP FRAME.

PLACE THIS SIDE ON
DOOR SURFACE SIDE


(2x) TOP LATCH HOLES

METAL: DRILL / TAP FOR 1/4-20"
MACHINE SCREWS

WOOD: PRE-DRILL 1/8" HOLES

LHR DOOR EDGE OR STOP FACE

RHR DOOR EDGE OR STOP FACE

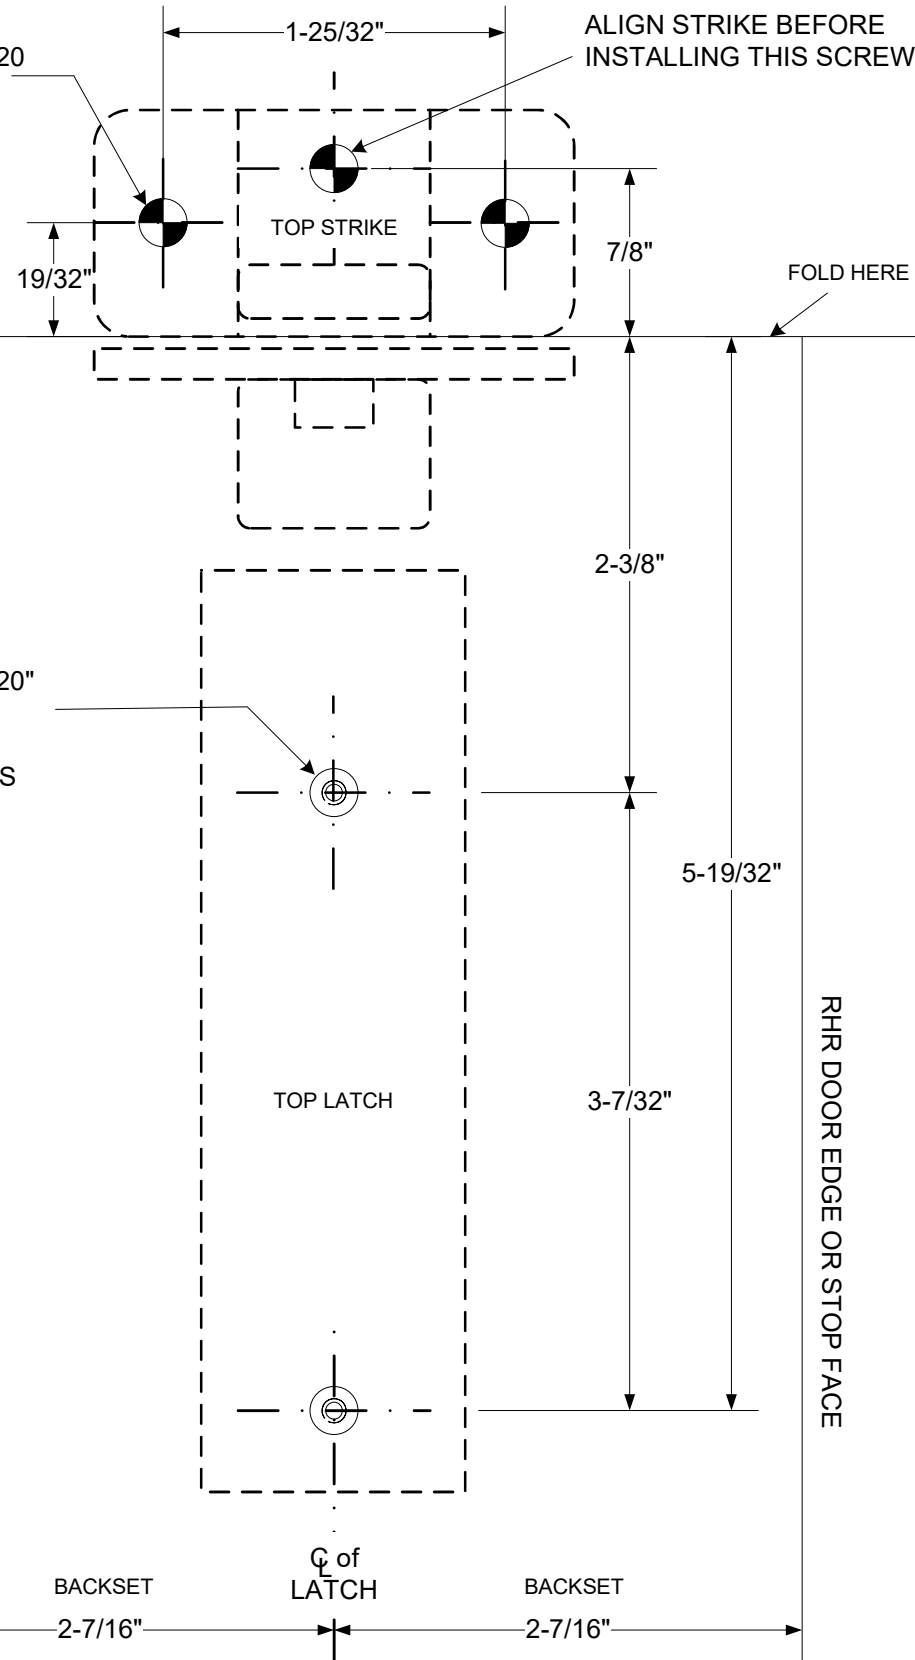

**BOTTOM LATCH
TEMPLATE**

(NOT REQUIRED FOR LBR DEVICE)


(2x) TOP LATCH HOLES

METAL: DRILL / TAP FOR 1/4-20"
MACHINE SCREWS

WOOD: PRE-DRILL 1/8" HOLES

LHR DOOR EDGE OR STOP FACE

RHR DOOR EDGE OR STOP FACE

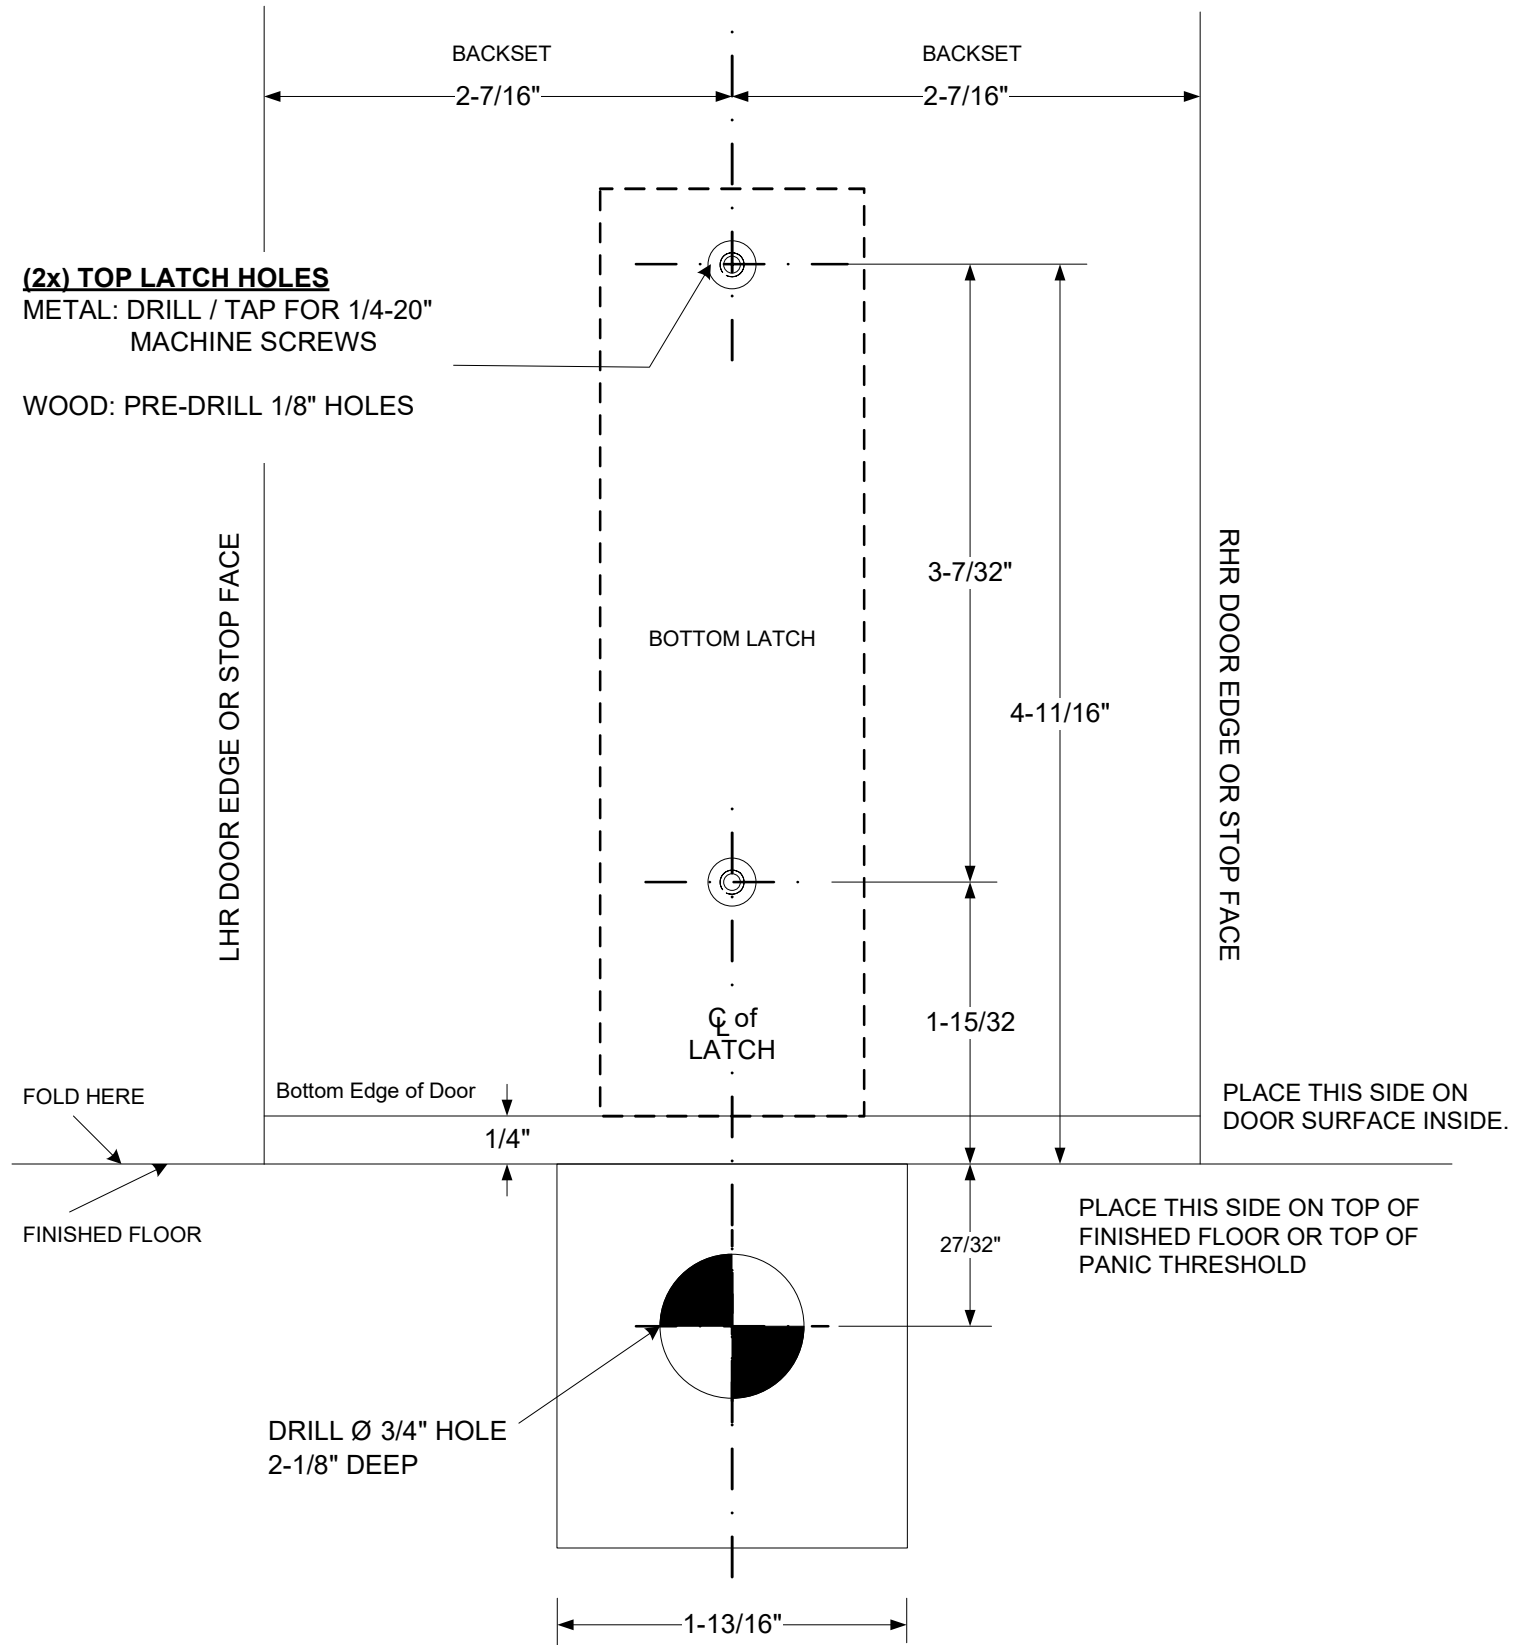

CUT HERE TO SEPARATE TOP TEMPLATE AND BOTTOM TEMPLATE



TEMP-08 & 14 08 CLASSROOM & 14 PASSAGE TRIM

