

# SDC Security Door Controls

801 Avenida Acaso, Camarillo, Ca. 93012 • (805) 494-0622 •  
www.sdcsecurity.com • E-mail: service@sdsecurity.com

## INSTALLATION INSTRUCTIONS IP100ARK ADAMS RITE ELECTRIC LATCH RETRACTION DEVICE KIT RIM EXIT DEVICE MODELS: 3700, 8700 & 8800

Assemble brackets  
as shown for different  
size Exit Devices.

36" or 42"

48"


**Retrofit Installation Note:** 42" or 48" exit devices that have been modified to fit a 36" or smaller opening, may not have the required space to fit the standard E. L. R. assembly. Always verify the distance from the end of the touchpad to the end rail, and if necessary, consult with the factory for appropriate selection.

Remove  
End Cap

Install the ELR bracket  
assembly into device  
extrusion, over the Push  
Bar support brackets.

Push Bar  
support bracket

Attach the Bracket assembly to  
the existing Device linkage as  
shown. Once the Bracket is in  
place, bend out the tabs so the  
Bracket assembly will slide easily,  
without falling out or binding.

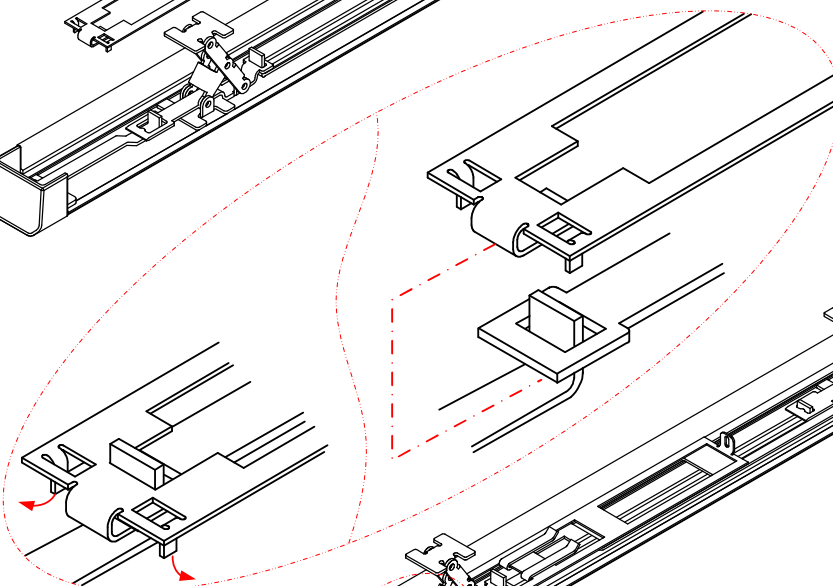

Slide ELR into back of  
device and attach to  
bracket assembly with  
supplied screw.

Bend tabs out

Apply power to the ELR unit to make it draw the  
sliding latch bracket back to the open position.  
Secure in position by tightening the set screws in the  
ELR assembly.

**ELECTRICAL DATA**  
12VDC @ 700/110mA  
RED (+) BLK (-)  
PATENT #8,851,530

Any suggestions or comments to this instruction or  
product are welcome. Please contact us through  
our website or email engineer@sdsecurity.com