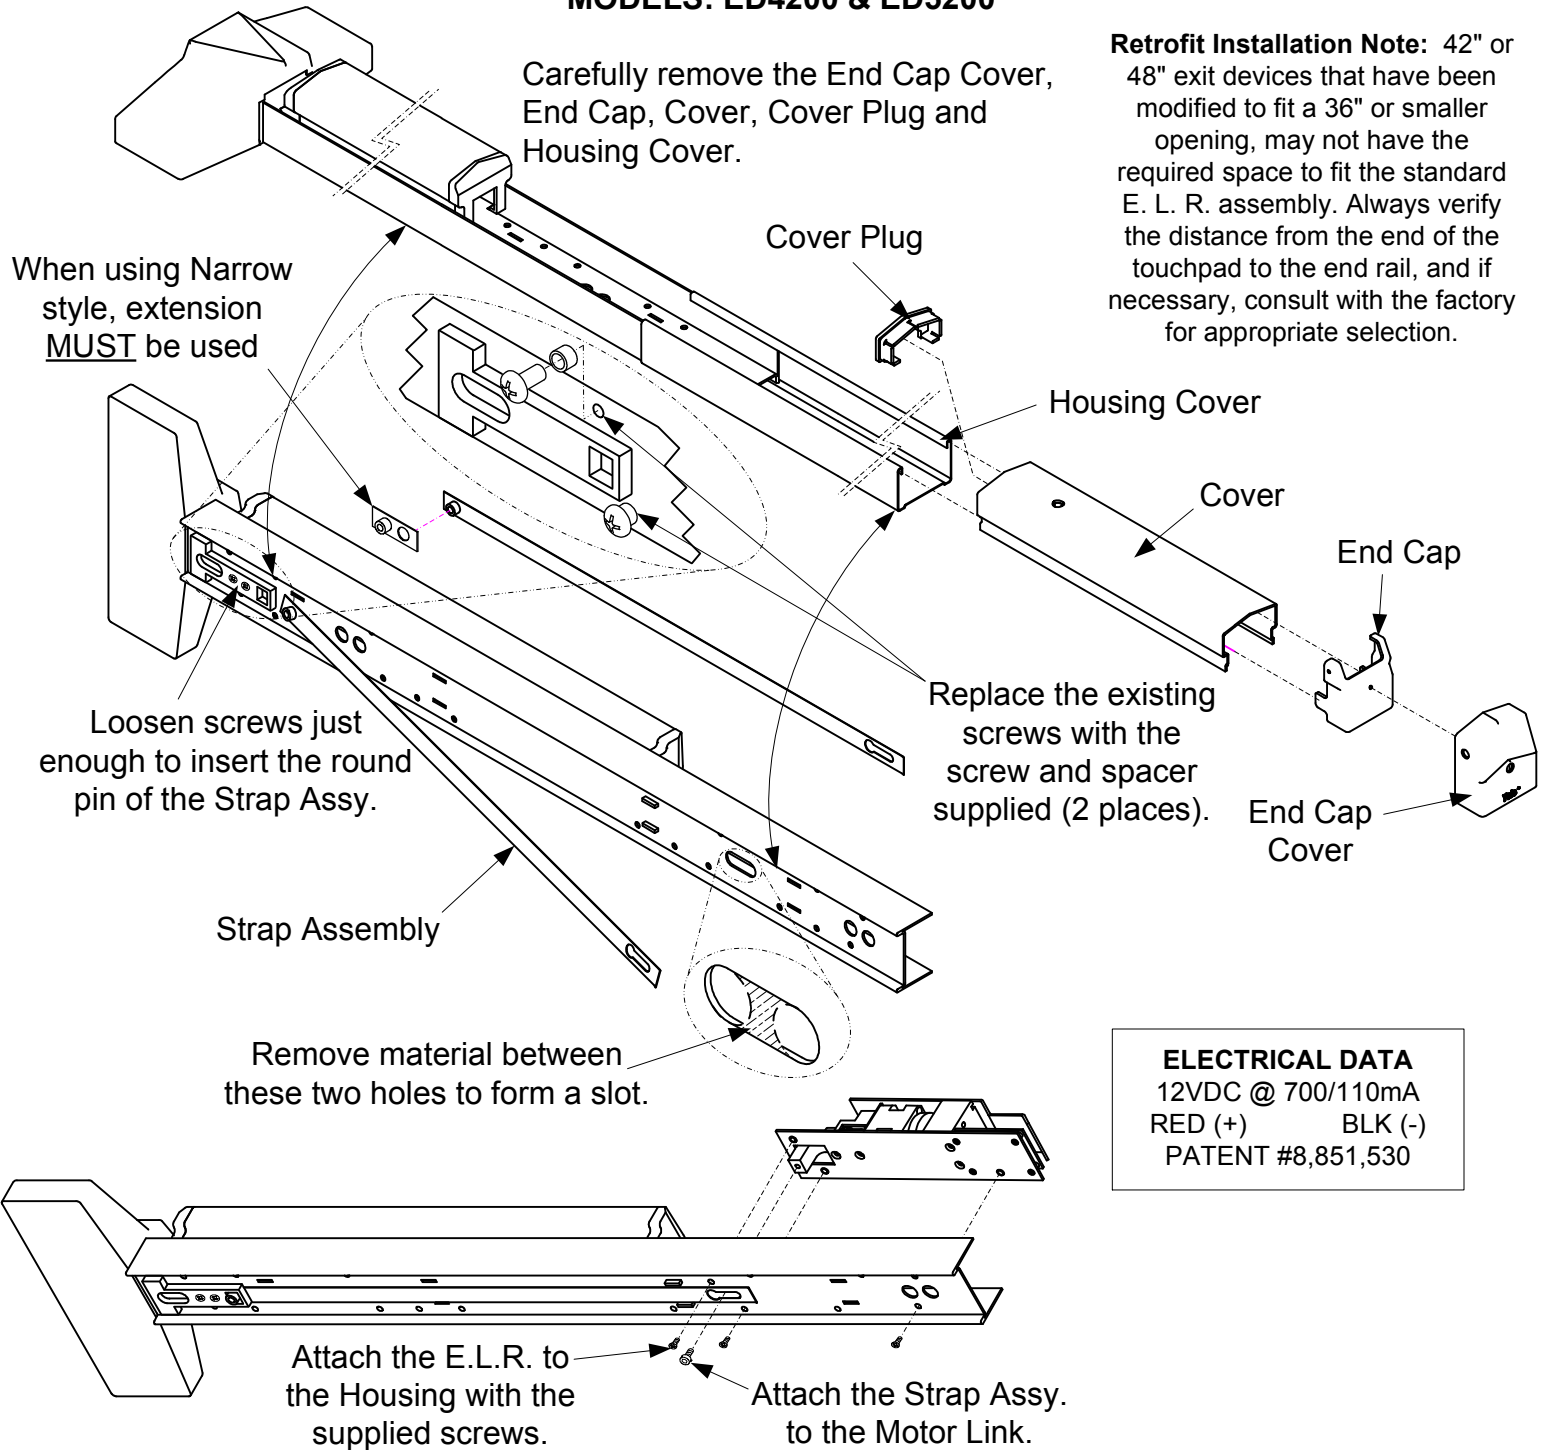# SDC Security Door Controls

801 Avenida Acaso, Camarillo, Ca. 93012 • (805) 494-0622 •
www.sdcsecurity.com • E-mail: service@sdcsecurity.com

INSTALLATION INSTRUCTIONS IP100CRK
CORBIN/RUSSWIN ELECTRIC LATCH RETRACTION DEVICE KIT
MODELS: ED4200 & ED5200

Carefully remove the End Cap Cover, End Cap, Cover, Cover Plug and Housing Cover.

Retrofit Installation Note: 42" or 48" exit devices that have been modified to fit a 36" or smaller opening, may not have the required space to fit the standard E. L. R. assembly. Always verify the distance from the end of the touchpad to the end rail, and if necessary, consult with the factory for appropriate selection.

When using Narrow style, extension MUST be used

Cover Plug

Housing Cover

Cover

End Cap

Loosen screws just enough to insert the round pin of the Strap Assy.

Replace the existing screws with the screw and spacer supplied (2 places).

End Cap Cover

Strap Assembly

Remove material between these two holes to form a slot.

ELECTRICAL DATA
12VDC @ 700/110mA
RED (+)   BLK (-)
PATENT #8,851,530

Attach the E.L.R. to the Housing with the supplied screws.

Attach the Strap Assy. to the Motor Link.

Replace Housing Cover, Cover with Plug, End Cap and the End Cap Cover.

Any suggestions or comments to this instruction or product are welcome. Please contact us through our website or email engineer@sdcsecurity.com