Security Door Controls

*801 Avenida Acaso, Camarillo, Ca. 93012*
*• (805) 494-0622 • Fax: (805) 494-8861*
*www.sdcsecurity.com •E-mail: service@sdcsecurity.com*

# TEMPLATE-N6800
# CONCEALED VERTICAL ROD

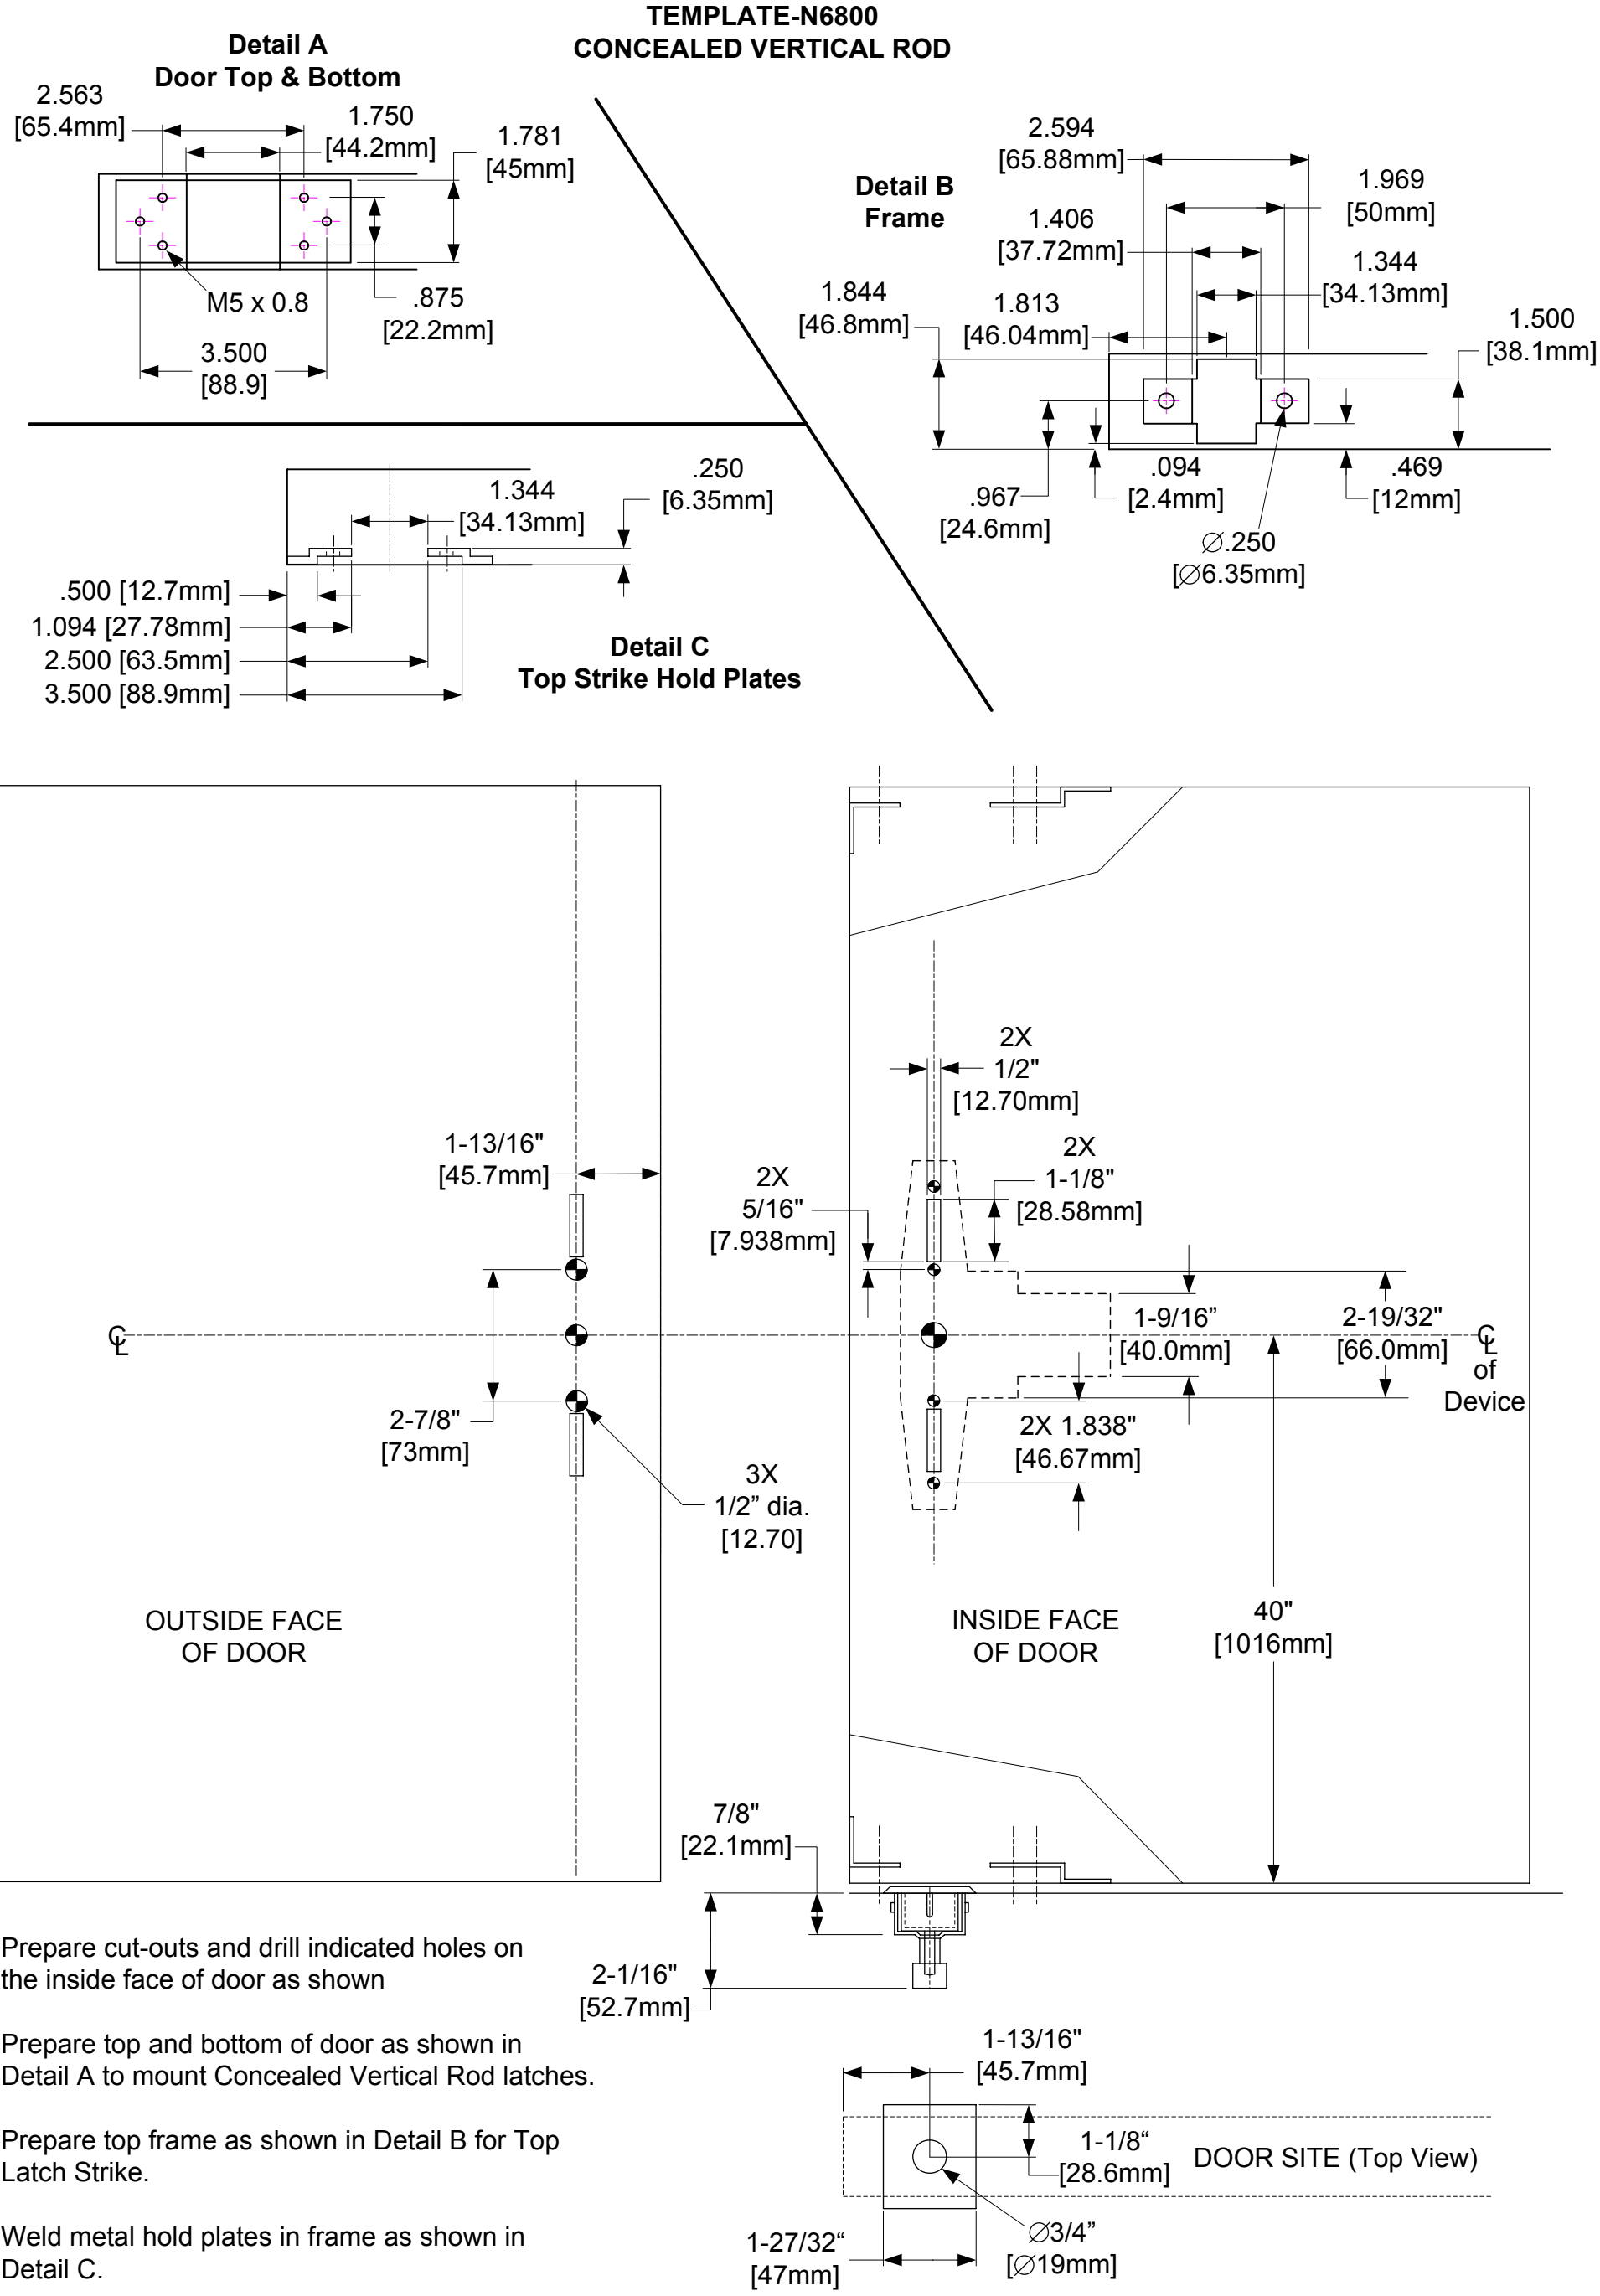


1. Prepare cut-outs and drill indicated holes on the inside face of door as shown
2. Prepare top and bottom of door as shown in Detail A to mount Concealed Vertical Rod latches.
3. Prepare top frame as shown in Detail B for Top Latch Strike.
4. Weld metal hold plates in frame as shown in Detail C.
5. Prepare floor as shown in Detail D for bottom Latch Strike.

Any suggestions or comments to this instruction or product are welcome. Please contact us through our website or email engineer@sdcsecurity.com